



**WirthCo Engineering, Inc.**

*Understanding and Fulfilling Customers' Needs*

## **Battery Doctor Automatic Battery Disconnect Key Fob Remote Programming Instructions**

- 1. Verify remote control has power by hitting either the on or off buttons. Blue light should flash on remote. If not, replace battery.**
- 2. Check to make sure Automatic Battery Disconnect is switched “on”. (LED light on unit should be flashing blue).**
- 3. Press and hold red plunger reset switch on the Automatic Battery Disconnect for 2 seconds. The LED will now be steady red for 5 seconds.**
- 4. During these 5 seconds, press and hold the “lock” button on the remote control for a full second, do this 2 times.**
- 5. When the LED displays a flashing red, the remote has been synchronized with the Automatic Battery Disconnect.**